

Fitting Instructions						
Page 1						
Make	Nissan	Model	X-Trail	Derivative	MK IV 7 Seater	REV A




Fitting Instructions						
Page 2						
Make	Nissan	Model	X-Trail	Derivative	MK IV 7 Seater	REV A



Pre-installation pictures.



Remove the upper false floor that sits just behind the 6th and 7th seats.

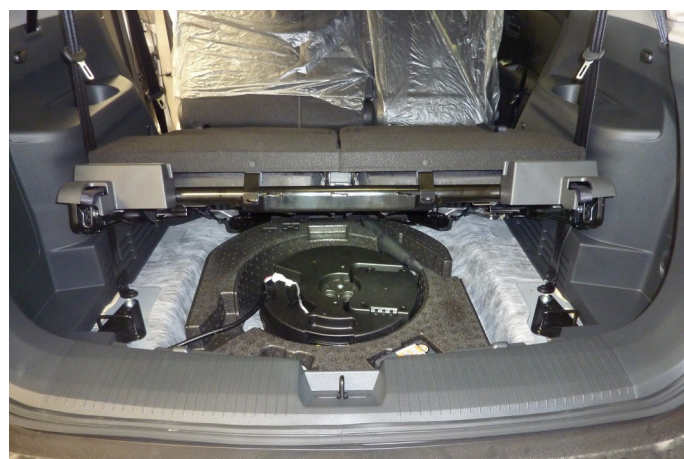

Remove the sub-floor cover and tilt the 6th and 7th seats up by pulling the two release belts.



Remove the two plastic covers at the front of the 6th and 7th seats.

Fitting Instructions						
Page 3						
Make	Nissan	Model	X-Trail	Derivative	MK IV 7 Seater	REV A



Remove the two bolts (16mm socket) that are found under the plastic covers.



Undo the gas struts by removing the small retaining ring at the end of the strut and then tilt the seats forward.



Remove the side panel at the rear edge of the 7th seat (this remains off the vehicle).



Remove the other trim piece from the 7th seat. This gets trimmed as shown and then replaced. Approximately 15mm of trim is removed.



Remove the boot sill by removing the two plastic rivets and the small centre section under the catch.



Fitting Instructions						
Page 4						
Make	Nissan	Model	X-Trail	Derivative	MK IV 7 Seater	REV A




Remove the door sill plastic trim from the RHS rear door.



Remove the side panel. The interior light and 12V socket connectors will need to be disconnected.


Fitting Instructions						
Page 5						
Make	Nissan	Model	X-Trail	Derivative	MK IV 7 Seater	REV A

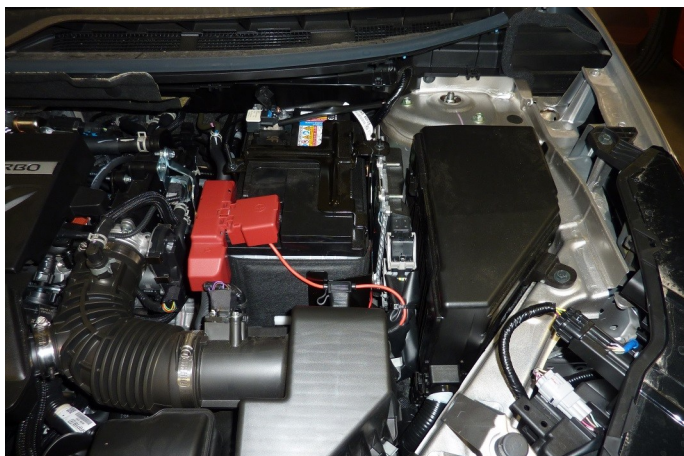

Run a power cable to the battery. In the design vehicle the battery was in the engine bay.



There is access through the bulkhead at the passenger side.

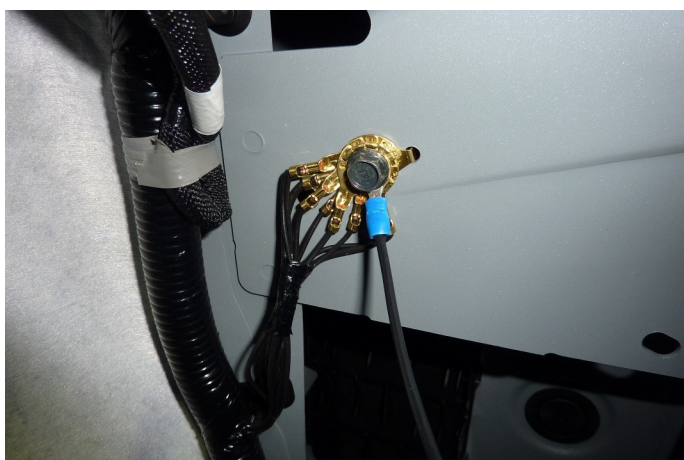

A suitable chassis earth should be used. On the design vehicle this was found behind the removed side panel.


Fitting Instructions						
Page 6						
Make	Nissan	Model	X-Trail	Derivative	MK IV 7 Seater	REV A



Attach the inner, outer and upper legs to the frame.



Inner Leg:
2 x M10x20mm Countersunk Set Screw

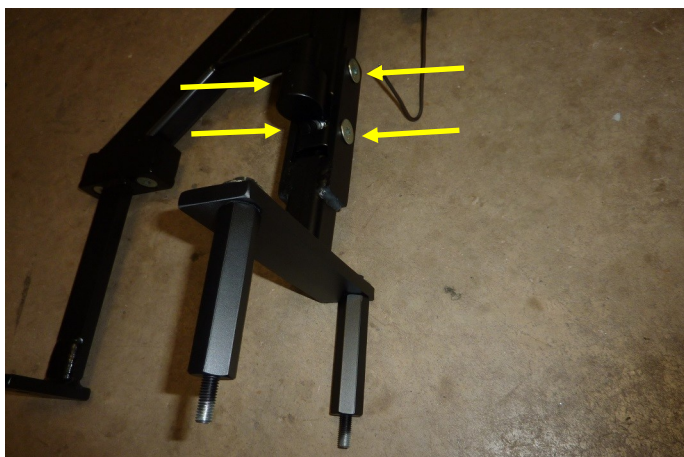

Outer Leg:
4 x M10x20mm Countersunk Set Screw



Upper Leg:
1 x M10x16mm Caphead Set Screw

Fitting Instructions						
Page 7						
Make	Nissan	Model	X-Trail	Derivative	MK IV 7 Seater	REV A



Remove the screw shown adjacent to the seat belt loop (16mm socket).



Remove the two screws shown at the metal webbing bracket shown (13mm socket).



The outer leg pylons mount to these fixing points. Use 1"x5/16" repair washers.

Fitting Instructions						
Page 8						
Make	Nissan	Model	X-Trail	Derivative	MK IV 7 Seater	REV A



Temporarily attach the legs and a-frame as shown. Outer leg attaches to the pylon mounts.



The inner leg attaches as shown.



Line up the position for the upper leg and drill a hole to mount it. **Ensure the use of a drill stop.**



The backplate can be threaded through the hole as shown.





Once the upper bracket is in place, trim the excess wire and ensure it is left in a safe way.

Fitting Instructions						
Page 9						
Make	Nissan	Model	X-Trail	Derivative	MK IV 7 Seater	REV A



Once happy with the fitment of the a-frame, remove it to drill and re-fit the plastic trim.

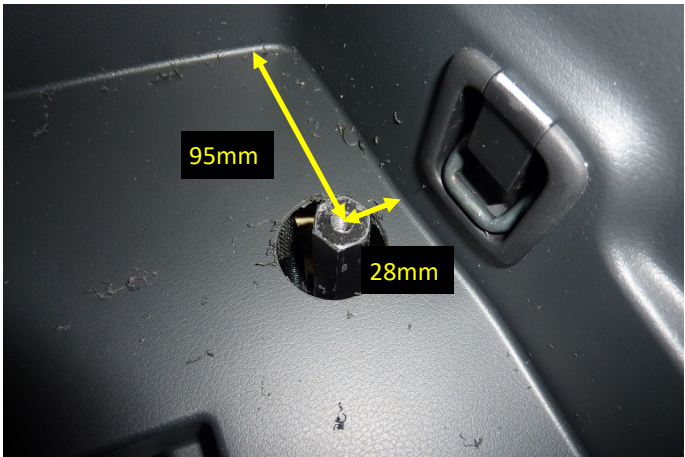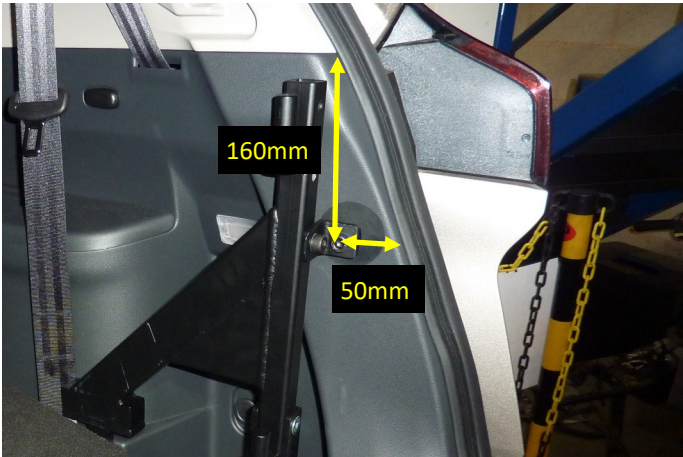

The measurements shown provide approximate guidance for drilling.



Re-fit the cut plastic trim and re-fit the a-frame.



Ensure the use of a pylon flange to neatly finish the upper fixing.

Fitting Instructions						
Page 10						
Make	Nissan	Model	X-Trail	Derivative	MK IV 7 Seater	REV A



Check the 7th seat deploys past the a-frame (in/out actuator bracket not fitted).



An extra washer or two can be added to this fixing if needed to space the other end of it away from the a-frame.




Re-fit the rear sub-floor cover and false floor. These should not require any cutting.

Fitting Instructions						
Page 11						
Make	Nissan	Model	X-Trail	Derivative	MK IV 7 Seater	REV A



Finish the assembly and setup of the hoist ensuring all fixings are tight and all wiring is completed correctly.

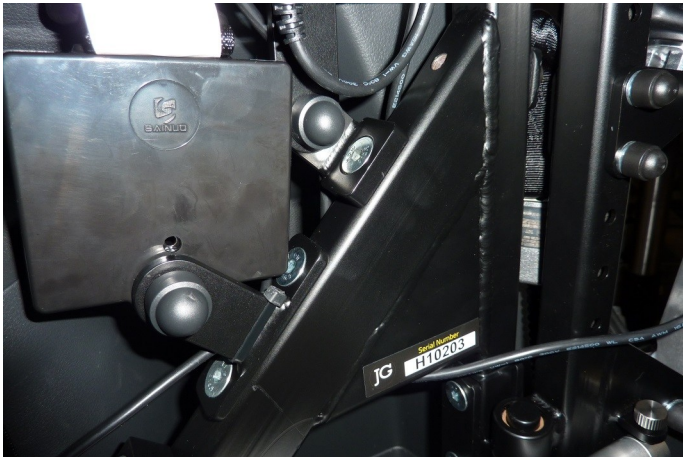

Fit the restraint reel and buckle and the control box in suitable positions.



Complete the setup of the hoist to load the required mobility device.

